

SPECIALIST IN BORING BAR FOR VMC AND HMC SPECIAL TOOLING



SHOP NO - 4, FIRST FLR, SOHAM INDUSTRIAL COMPLEX, PLOT - 318, SECTOR - 10, BHOSARI MIDC, PUNE - 411026 +91 9860081448 +91 7030104006 | nncuttingtoold@gmail.com | www.nncuttingtools.com | www.microbore.in

- Quality & Timely delivery is our force.
- Win win policy with customers.
- Ethical business practice.
- International standard product at national cost.















N. N. CUTTING TOOLS was established in the year of 2011, by Mr. N. Magar. He has more than 20 years experience in this field. It is one of the top most company in Pune in the manufacturing of MICRO BORE UNITS as well as MICRO BORING BARS STRAIGHT AND ANGULAR. We also offered products like Cartridge & unit, Micro Boring Cartridge like sandvik, Rough & Finish boring bars, Combination boring bars, T Slot Cutter, Side & Face Milling Cutter, U Drill, Core Drill, Spot Face Cutter, Trepanning Tools, CNC Tool holder, CNC Turning, CNC boring bar, Grooving Tools, Face Grooving Tools, Special tools as per customer needs. We are using high grade raw material for the products.

Our company is highly quality oriented and maintains rigid quality standard. Engineers has complete knowledge of the products. We are engaged in supplying of CNC Tools. Having robust construction & immaculate finishing. And these tools are stringently checked on various parameters to ensure their excellent performance and compliance with international quality standard. Moreover, these tools are offered at competitive prices. So these tools find their wide applications in various industries. We have formed strong business association with some of the well-known and authorized industry. Our prime motto is to offer the utmost client satisfaction; therefore we follow fair business practices and ethics. Our offered products are well tested and inspected on various parameters. We are also offering trial service of the product to customers.

We N N Cutting Tools are leading Manufacturers And Suppliers of Industrial cutting tool and Milling tools, VMC Tool in india from Pune, Maharashtra.

NN SERIES - MICRO BORING UNIT



NN Series fine boring units are specifically designed for building into boring bars which are high precision machining for specific bore size.

IMPORTANT POINT:

- Can be mounted in blind holes.
- Adjustment is made from the front side.

- The units are self-locking i.e. there is no need for unlocking before or locking after setting.

PLEASE NOTE :

- When setting a unit, mounting in angular position, the axial position changes equal to radial movement/tan 53° 8'.

- When designing special tools, please calculate the nominal diameter to be machined with the unit set to the centre of the adjustment range, 'X' this makes it possible to adjust the nominal bore plus and minus.

- Never unscrew the cartridge further than indicated by the letter 'X' Maximum of the setting key for the unit concerned. If the limit is exceeded the unit cannot be repaired.

- Two types of Mounting are available in Micro Boring Unit, they are Angular Mounting & Straight Mounting.



ANGULAR MOUNTING



ANGULAR MOUNTING - LEFT HAND SHOW (L N A)

SR. NO.	UNIT SIZE	X	DIAMETER D	Dc	F1	Dm h7	u	L2
1	R/L N A16-T/C	1.7	25.3 Min.	24	0.45	16	25.6	14.5
2	R/L N A20-T	2.1	33.3 Min.	31.5	09	20	33.7	18.8
3	R/L N A22-T	2.8	42.3 Min.	39.5	1.1	22	45.3	23.2
4	R/L N A32-T	5.0	60 Min.	56.5	1.2	32	63.7	32.6

ALL DIMENSIONS ARE IN MM

NOTE: Where A° = Entering angle

X is denoting to understand Minimum and Maximum travel of Cartridge form zero conduction.

STRAIGHT MOUNTING



STRAIGHT MOUNTING - LEFT HAND SHOW (L N S)

SR. NO.	UNIT SIZE	x	DIAMETER D	Dc	F1	Dm h7	u	L2
1	R/L N \$16- T/C	1.7	27.5 Min.	26.0	5.1	16	24.1	13
2	R/L N \$20-T	2.1	37.2 Min.	34.9	6.2	20	32.5	17.8
3	R/L N \$22-T	2.8	48.8 Min.	46.9	7.2	22	45.8	23.8
4	R/L N \$32-T	5.0	69.5 Min.	67	10.3	32	62.8	31.7

ALL DIMENSIONS ARE IN MM

NOTE: Where A° = Entering angle

X is denoting to understand Minimum and Maximum travel of Cartridge form zero conduction.



MOUNTING DIMENSION FOR N SERIES MICRO BORING UNITS



Detail D

Δ	Dm / DH7	dH9	d2	d3	h1	h2	h3	TL	Th	
06	16	19.05	4.6	3.2	10.93	2.8	1.65	9	M3	9.65±0.02
09	20	25.05	4.6	3.2	14.97	4.0	1.65	9	M3	12.50±0.05
11	22	30.05	6.5	4.3	23.02	5.0	1.85	13	M4	15.40±0.05
16	32	46.05	11.8	5.38	31.9	6.4	1.95	16	M5	23±0.05

NN SERIES BORING UNITS

	N A- N SER	LEAD ANGLE 0° ENTERING ANGLE, A°			
SR. NO.	ORDERING CODE	ENTERING ANGLE, A ^o	INSERT TYPE ISO	MINIMUM CUTTING DIA	FEED DIRECTION
1	R/LN A16-T/C	90°	TCMT0602 CCMT0602	25.3	SHOW LH
2	R/LN A20-T	90°	TCMT0904	33.3	
3	R/LN A22-T	90°	TCMT1104	42.3	
4	R/LN A32-T	90°	TCMT1604	60	

	N S- N SE	LEAD ANGLE 0° ENTERING ANGLE, A°			
SR. NO.	ORDERING CODE	ENTERING ANGLE, A ^o	INSERT TYPE ISO	MINIMUM CUTTING DIA	FEED DIRECTION
1	R/LN S16-T/C	90°	TCMT0602 CCMT0602	27.53	SHOW LH
2	R/LN S20-T	90°	TCMT0904	37.23	
3	R/LN S22-T	90°	TCMT1104	48.86	
4	R/LN S32-T	90°	TCMT1604	69.5	



ANGULAR MICRO BORING BAR



SR. NO.	CUTTING DIA = D	T.R.	LENGTH = L	L2	INSERT
A-1	15.9-17.2	1	45	12	TCMT 06
A-2	17.9-19.2	1	50	12	TCMT 06
A-3	19.9-21.2	1	55	12	TCMT 06
A-4	21.9-23.2	1	60	10	TCMT 06
A-5	23.9-25.2	1	65	10	TCMT 06
A-6	25.9-27.2	1	70	10	TCMT 06

STRAIGHT MICRO BORING BAR



SR. NO.	CUTTING DIA = D	T.R.	LENGTH = L	L2	INSERT
S-1	18.9-20.2	1	50	10	TCMT 06
S-2	20.9-22.2	1	55	9	TCMT 06
S-3	22.9-24.2	1	65	8	TCMT 06
S-4	24.9-26.2	1	75	7	TCMT 06
S-5	26.9-28.2	1	85	6	TCMT 06



MICRO BORING DIAMETER ADJUSTMENT



Fig.1

First of all set the desired diameter on Presetter or with help of dial outside machine with help of spanner.

Load tool in spindle.

Check that you are getting desired size, if not follow below instruction.



Fig.2

Find the line in the vernier scale that exactly lines up with a reference line.

Diameter increase in 0.02mm (20micron) are made by adjusting the dial rotation in ' \rightarrow +' direction one full line on the fixed scale.

See the diff. between fig. 1 & 2.



Diameter increase in 0.002mm (2micron) are made by adjusting the dial rotation in ' \rightarrow +' direction until the appropriate line on the vernier scale lines up with the next scale reference line.

Fig.3

See the diff. between fig. 1 & 3.



Maximum adjustment you can check by using spanner end.

Do not exceed the given adjustment limit to avoid damage

Fig.4

