

SOLAR PCU USER MANUAL

Salient Features

- + Built-in MPPT / PWM Solar Charge Controller.
- + Micro Controller / DSP Based smart controller design.
- + Pure Sine Wave Output.
- + Electronic Overload and Short Circuit Protection.
- + Easily Serviceable.
- + Auto Changeover / Reset Feature.
- + Mains Input Voltage Range Selection.
- + Multi Stage Charging.
- + Audio Visual Indications (Status & Fault).

ISO 9001:2008

Introduction

Dear Customer,

Thank you for purchasing Olympus Power product. Olympus Power Pvt. Ltd Make Advance MICRO CONTROLLER based SOLAR PCU / UPS products have been carefully designed to operate in both industrial and commercial environments. In commercial applications, our SOLAR PCU / UPS products fit according to aesthetically into the environment and perform reliably for years.



General Safety & Precautions

- + Review the following safety precautions to avoid injury and to prevent damage to the SOLAR PCU or any other products connected to it. To avoid potential hazard use this product only as specified.
- + Service shall be done ONLY by qualified / authorized personnel!
- + To Avoid Fire or Personal Injury, never use Automobiles Batteries with your SOLAR PCU. They are not suitable for these applications.
- + Always check the water level in batteries (For flooded batteries only). This will keep your batteries in good condition and also enhance its life.



Do's

- Provide proper ventilation!
- + Install the power SOLAR PCU in a location that is well ventilated so that the heat it generates can be dissipated easily.
- + Do check the water level of your battery for every 3 months as this is very much essential to keep the battery in good condition.
- + Keep your batteries rust-free, good lubricating oil or petrol can be beneficial to lubricate your battery terminals at least once every month.
- + Check that your SOLAR PCU is earthed properly.
- + Always mount the SOLAR PCU in a cool and dry location
- + While wiring your Power SOLAR PCU use Standard and insulated Wires, poor Wiring may lead to Short Circuit that may even lead to fire.



Don'ts


- + Do not operate without covers!
 - + Do not operate SOLAR PCU with covers removed.
- + Avoid exposed circuitry!
 - + Do not touch exposed connections and components when powered.
- + Do not operate with suspected failures!
 - + If you suspect that the SOLAR PCU is damaged, have it inspected by qualified personnel.

Do not operate in an explosive atmosphere!

Do not touch the SOLAR PCU terminals while the power is applied to the SOLAR PCU even if the SOLAR PCU stops.

Front Panel Description


This section describes the front panel of the SOLAR PCU

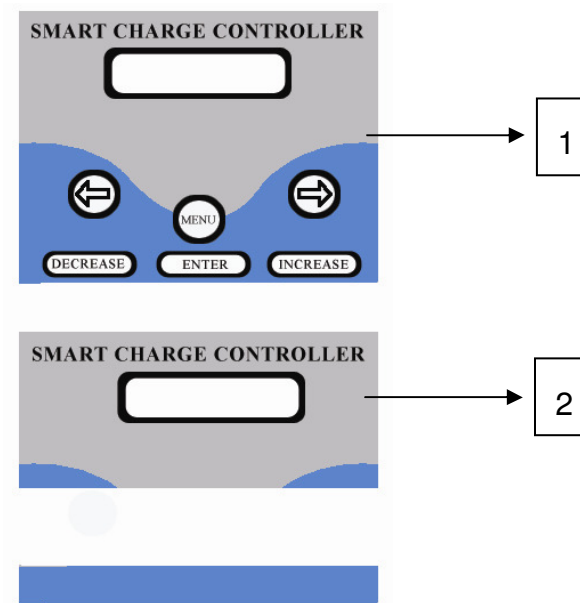

LCD Indication


1. This display is provided for SOLAR PCU charge controller and it displays following items :
 - + Battery Voltage
 - + Charging Current of Battery
 - + Total power (in terms of wattage) supplied from PV to Battery
2. This display is provided to show indication related to Inverter mentioned as below :
 - + MAINS ON
 - + CHARGER ON
 - + SOLAR PCU ON
 - + BATTERY LOW
 - + OVER LOAD

Description of Back Panel

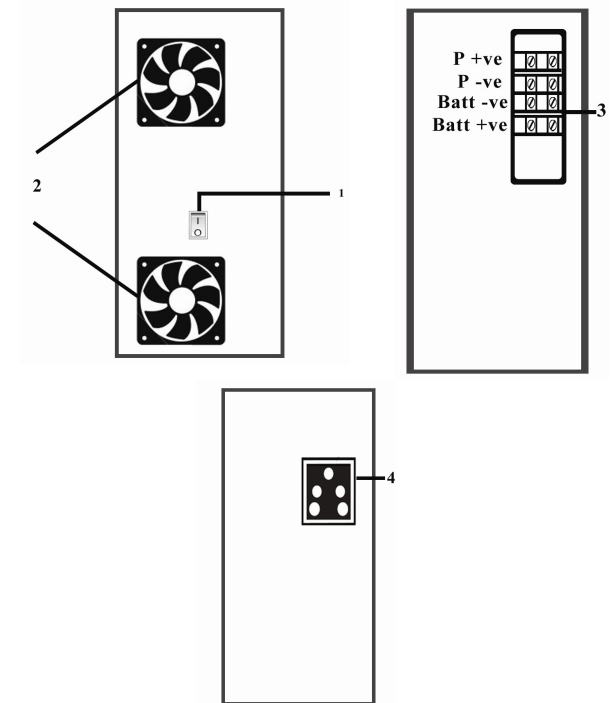

1. ON/OFF SWITCH.-
This is provided to switch on or Off the PCU.
2. FANS :-
This are provided for ventilation to PCU.
3. BATTERY AND PV CONNECTIONS :-
This are provided to connect battery and solar panel to SOLAR PCU according to given polarities.
4. INVERTER OUTPUT
This is provided to connect load to SOLAR PCU. According to given polarities

Installation & Wiring

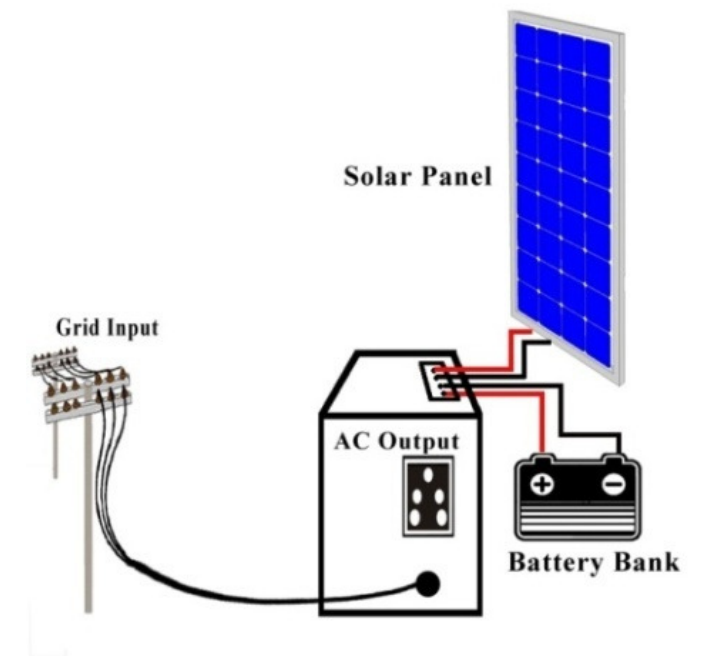

Easy Installation

- ✦ Mount the SOLAR PCU in suitable, clean, dry and ventilated place
- ✦ Ensure that the front panel switch and all MCBs are in OFF position.
- ✦ Check polarity of battery and connect wires according to correct polarity.
- ✦ Now LCD is ON and it shows "SWITCH OFF/ AWAY MODE"
- ✦ Connect mains I/P to SOLAR PCU and switch ON the INPUT MCB and BATT. MCB.
- ✦ Switch ON the SOLAR PCU and OUTPUT MCB. Check if SOLAR PCU works properly.

Note:-While Installing with MPPT Solar Charger always ensure that the charger is initially connected to battery. Never connect MPPT Charger to SOLAR PCU without battery connection

Technical Specification

| Input | |
|--|--|
| Input Voltage Range | <ul style="list-style-type: none"> ✦ 100V ~ 300V (Wide input voltage range) ✦ 180V ~ 260V (Normal input voltage range) |
| Nominal Input Voltage(s) Supported | 220V AC, 50Hz |
| Solar Charge Controller | |
| Type | MPPT/PWM |
| Charge Algorithm | 3-stage Bulk / Acceptance / Float Plus Equalize |
| LCD Display | Backlit, Alphanumeric Display showing battery voltage, DC amperage, Cumulative KWH hours |
| Output | |
| Output AC waveform | Pure Sine Wave |
| Efficiency | >88% |
| General | |
| LCD/LEDs Indications | SOLAR PCU ON (Yellow), Battery Low (Red), Mains ON (Green), Charging (Green), Overload (Red) |
| Operating Temperature Range | 0° C to 50° C |
| Max Charging Current (when battery is fully discharge) | 10A ±2amp |
| Charge End Voltage | Grid charging stop when battery reaches 13.8V ±0.2V and transfer to backup mode (per battery) |
| Grid Recharge Voltage | Grid charging starts when battery reaches 11V ±0.2V and transfer to grid (per battery) |

Troubleshooting Chart

In any case of unsatisfactory operation, please consult the next table first:

| SYMPTOM | REMEDY |
|---|---|
| Battery is not charging even if mains available | If LCD display shows "MAINS : OFF" Batteries are fully charged / Check if input MCB is OFF |
| LCD Displays "OVERLOAD" | Check load and wiring Reset the SOLAR PCU by switching OFF the unit first and then by switching ON the unit again. |

| Models | Output Volt Amp / Watt Capacity | DC Voltage VDC | Max.PV open Circuit Array Voltage | No Battery |
|---|---------------------------------|--------------------------------------|-------------------------------------|--------------------------|
| SO312 | 300VA / 240W | 12V | 22VDC | 1 |
| SO612 | 600VA / 480W | 12V | 22VDC | 1 |
| SO812 | 800VA / 640W | 12V | 22VDC | 1 |
| SO1024 | 1000VA / 800W | 24V | 44VDC | 2 |
| SO1524 SO1536 SO1548 | 1500VA / 1200W | 24V / 36V / 48V | 44 / 66 / 88 VDC | 2 / 3 / 4 |
| SO2036 SO2048 SO2072 | 2000VA / 1600W | 36V / 48V / 72V | 66 / 88 / 132 VDC | 3 / 4 / 6 |
| SO2548 SO2572 | 2500VA / 2000W | 48V / 72V | 88 / 132 VDC | 4 / 6 |
| SO3048 SO3096 SO3072 | 3000VA / 2400W | 48V / 72V / 96V | 88 / 132 / 176 VDC | 4 / 6 / 8 |
| SO3548 SO3596 SO3572 | 3500VA / 2800W | 48V / 72V / 96V | 88 / 132 / 176 VDC | 4 / 6 / 8 |
| SO4072 SO4096 | 4000VA / 3200W | 72V / 96V | 132 / 176 VDC | 6 / 8 |
| SO5036 SO5096 SO5144 SO5048 SO5120 SO5192 | 5000VA / 4000W | 36V / 48V / 96V / 120V / 144V / 192V | 66 / 88 / 176 / 220 / 264 / 352 VDC | 3 / 4 / 8 / 10 / 12 / 16 |
| SO6144 SO6192 | 6000VA / 4800W | 144V / 192V | 264 / 352 VDC | 12 / 16 |
| SO7.5144 SO7.5192 | 7500VA / 6000W | 144V / 192V | 264 / 352 VDC | 12 / 16 |
| SO10096 SO10192 SO10120 | 10000VA / 8000W | 96V / 120V / 192V | 176 / 220 / 352 VDC | 8 / 10 / 16 |
| SO15096 SO10120 SO10192 | 15000VA / 12000W | 96V / 120V / 192V | 176 / 220 / 352 VDC | 8 / 10 / 16 |
| SO20096 SO20120 SO20192 | 20000VA / 16000W | 96V / 120V / 192V | 176 / 220 / 352 VDC | 8 / 10 / 16 |


Warranty Conditions

Warranty and liability claims for injuries and damage shall not be accepted if they are due to one or more of the following causes: Improper use of the SOLAR PCU

- ✦ Improper installation, commissioning, operation and maintenance
- ✦ Operation of the SOLAR PCU with defective and/or non-operational safety
- ✦ And protective equipment
- ✦ Failure to observe the information in the user manual regarding installation, Commissioning, operation and maintenance
- ✦ Unauthorized modifications
- ✦ Inadequate monitoring of wearing parts
- ✦ Improper repairs
- ✦ Emergencies caused by external influence or force majeure



Model No- _____
 Serial No- _____
 Customer Name- _____
 Address- _____
 Date of Purchase- _____

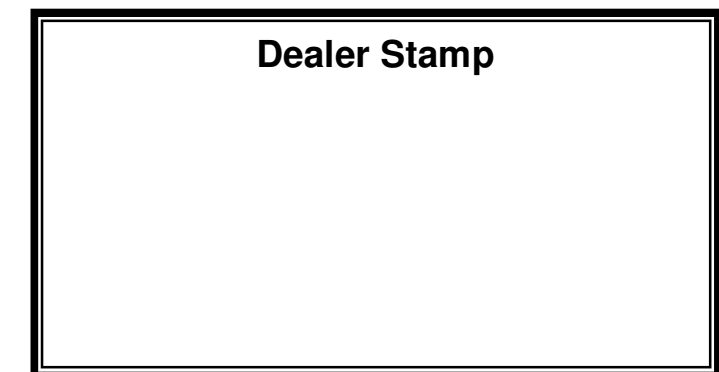

Please contact our customer care for further details: OLYMPUS POWER PVT. LTD.
 Prestige Plaza Opp. Formica
 Bldg. No. 2 Office No. 204
 Akurdi, Pune - 411035
 PH. - 020-27242656
 M. - 09922430203
 Email Id: info@olympuspower.in
 sales@olympuspower.in